## **RO'VED FIRMWARE v1.2 CHEATSHEET:**

#### **NAVIGATION BETWEEN SYNTHESIS MODELS:**

- Press FREQ to move to the previous model
- Press TIMBRE to move to the next model
- Press MORPH to move to the previous bank
- Press HARM to move to the next bank



# FREQUENCY LOCK:

• To toggle frequency lock press TIMBRE & MORPH simultaneously

Sample & Hold

### FIRMWARE SETTINGS MENU:

• To enter or exit the menu press

#### **MENU NAVIGATION:**

Sqr Sub

• Press FREQ or TIMBRE to navigate between menu options

Alt 1

Alt 2


• Press MORPH or HARM to change the value

### PUSH & TURN TO CHANGE ALTERNATIVE PARAMETERS:

- Push & Turn **TIMBRE** to change LPG / VCA
- Push & Turn MORPH to change internal envelope Decay

**SETTINGS MENU OPTIONS:** 

• Push & Turn HARM to change Frequency range

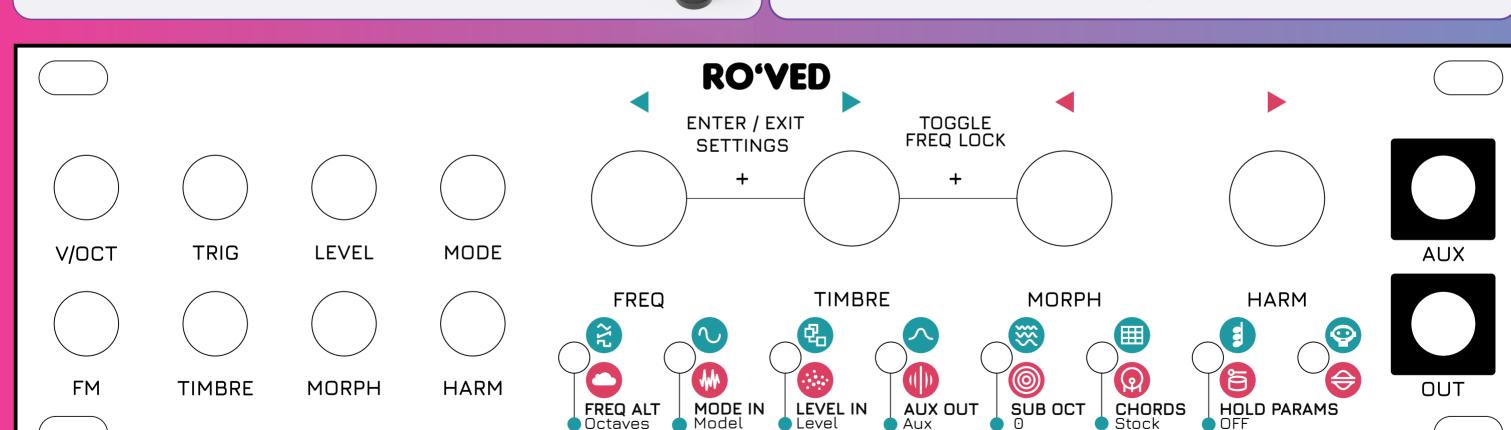



Decau

LPG

Aux XFD

Fifths

Aux XFD